

# Portable video recorder Instruction Manual



## 1. Product Structure

### Product Description



- 1) Video/confirm button 2) Power button/screen off button  
3) Up button 4) Down button 5) M menu button  
6) Microphone 7) Indicator light 8) Speaker  
9) Front and rear turn 180 degrees 10) Lens 11) Display screen  
12) USB interface 13) Reset button/hole 14) TF card slot  
15) Battery installation

## 2. Introduction to button and interface functions

### 1. Record/Save/Confirm button

- 1) Short press to start recording, then short press to stop recording and save.

### 2. Power button/off screen button

- 1) Long press to turn on/off;  
2) Short press the power button to turn off the screen

### 3. Up key

- 1) Up selection key;  
2) Short press to zoom in on the focal length  
3) Long press/night vision light

### 4. Press the down button

- 1) Down selection key;  
2) Short press to reduce the focal length.  
3) Long press to enter photo mode/press confirm button/take photo

### 5. M/Menu key

- 1) Short press the M key to enter recording options  
2) Press the M key twice to enter the menu with four empty mode options/replay settings and format network  
3) Enter replay/unlocked recording, locked recording, image file, audio file  
4) Enter the video lock and play the video. Long press the M key to select lock/you can quickly find the locked file in the locked recording  
5) Enter the setting mode selection/setting  
6) Entering formatting can clear all files and format them  
7) Enter the network/turn on the recorder/connect to WIFI

### 6. Microphone

Can clearly record sound in both video and audio recordings

### 7. Indicator lights

- Blue light on/working  
Blue light flashing/recording or recording  
Red light on/charging  
Red light off/full

### 8. Speaker

1510 large magnetic horn

### 9. Turn 180 degrees forward and backward

Can rotate 180 degrees

### 10. Lens

Lens 2063-650 chip

### 11. LCD display

Color LCD display

### 12. USB interface

This port can be used to connect a USB cable for charging and to view or transfer files on a PC. When the camera is connected to the cable and power supply, the camera will automatically turn on.

### 13. Reset button/hole

When the machine crashes due to a black screen or other issues, short poke it with a needle to restart it

### 14. TF card slot

The device supports a maximum of 128 GTF cards. If there is an error message or recording cannot be performed properly after inserting the memory card, please format the memory card in the menu settings. It is recommended to format the memory card when inserting it for the first time and use a U3 memory card

### 15. Battery installation

18650LI-ION 2000mAh

## 3. Basic operating instructions

### 1. USB mode

The device uses USB data to connect to the computer, and after the device automatically powers on, the screen displays three options: memory/PC camera/video mode

**Storage:** In this mode, video files or photo files can be accessed and viewed;

**PC Camera:** In this mode, it can be used for computer cameras;

**Video mode:** Only used for powering devices from computers.

## 4. Product parameters and specifications

|                                   |   |
|-----------------------------------|---|
| Left and right lenses             | Rotating lens 180 degrees   |
| IPS display screen                | Color display screen (240 * 240)  |
| Video resolution                  | 1080P 2K 4K   |
| Pixel                             | 2M 4M 8M 12M  |
| Video file format                 | MP4   |
| Photo format                      | JPG   |
| Video pre recording               | switch  |
| Loop recording                    | Off, 1, 3, 5, 10, 15, 30, minute  |
| Time Setting                      | support   |
| Keypress sound                    | On, Off   |
| Volume Control                    | Off, low, medium, high  |
| Language                          | English, Simplified Chinese, Traditional Chinese, Japanese, Korean, Russian, French, German, Portuguese, Italian, Spanish, Thai |
| Communication frequency           | 50Hz, 60Hz  |
| Automatically turn off the screen | Close for 3 minutes, 5 minutes, 10 minutes  |
| format                            | Confirm Cancel  |
| Operating Humidity                | 30%   |

|                       |  |
|-----------------------|--|
| Operating Temperature | +65-20°C   |
| Power supply          | USB voltage 5V, current>1A USB standby current:<5.44mA |
| Machine current       | Battery standby current:<39.1uA                        |
| Low power warning     | 3.48v  |
| Power consumption     | BAT3.7v/<262mA/K0.97w /USB5V/s637mA/K3.68W             |
| Memory card           | TF card, supports up to 128GB                          |

Attention: This product reserves the right to make design and specification changes without prior notice.

Scan the QR code below to download and install the APP



WiFi: Starting with L

Password: 88888888

1. Long press the M key to open the WIFI name

2. Short press the M key twice to open the menu. 4. Select network WIFI

# 便携录像机

## 说明书



### 一、产品结构

#### Q 产品说明



- 1)录像/确认键 2)电源键/关屏键 3)向上键 4)向下键 5)M 菜单键  
6) 麦克风 7) 指示灯 8) 喇叭 9)前后转向 180 度 10) 镜头  
11) 显示屏 12) USB 接口 13) 复位键/孔 14) TF 卡槽 15) 电池安装

### 二、按键及接口功能介绍

#### 1. 录像/保存键/确认键

1)短按开始录像, 再短按停止录像+保存。

#### 2. 电源键/关屏键

- 1)长按可开机/关机;  
2)短按开关键为关屏

#### 3. 上键

- 1)向上选择键;  
2)短按放大焦距。  
3) 长按/夜视灯

#### 4. 下键

- 1)向下选择键;  
2)短按可缩小焦距。  
3)长按进入拍照模式/按确认键/拍照

#### 5. M/菜单键

- 1) 短按 M 键进入录音选项  
2)按两次 M 键进入菜单四空模式选项/回放 设置格式化 网络  
3)进入回放/未加锁录像, 加锁录像, 图片文件, 录音文件  
4)进入视频加锁 播放视频 长按 M 键选择加锁/可以在加锁录像中快速找到已加锁文件  
5)进入设置模式选择/设置  
6)进入格式化可以把所有文件清除 格式化  
7)进入网络/打开录风者/连接 WIFI

#### 6. 麦克风

可以在视频和音频, 录制中清晰地记录声音

#### 7. 指示灯

蓝灯亮/工作  
蓝灯一闪一闪/录像或者录音  
红灯亮/充电  
红灯灭/充满

#### 8. 喇叭

1510 大磁喇叭

#### 9. 前后转向 180 度

可以旋转 180 度

#### 10. 镜头

镜头 2063-650 芯片

#### 11. 液晶显示

彩色液晶显示

#### 12. USB 接口

该端口可用于连接 USB 线进行充电以及在 PC 上查看或传输文件。当相机连接电缆和电源时, 相机会自动开机。

#### 13. 复位键/孔

当机器出现黑屏死机等情况时, 用针短戳一下可重新启动

#### 14. TF 卡槽

设备最大支持 128GTF 卡, 如果内存卡插入后提示 错误或者不能正常录制, 请在菜单设置中格式化内存卡建议首次插入的时候格式化内存卡, 建议用 U3 内存卡

#### 15. 电池安装

18650LI-ION 2000 毫安

### 三、基本操作说明

#### 1. USB 模式

设备使用 USB 数据与电脑连接, 设备自动开机后屏幕显示存储/PC 摄像/视频模式' 三个选项:

**存储器:** 在此模式下可进行视频文件或者照片文件的存取与查看;

**PC 摄像:** 在此模式下可用于电脑摄像头进行使用;

**视频模式:** 仅用于电脑给设备供电。

### 四、产品参数与规格

|         |   |
|---------|---|
| 左右镜头    | 可旋转镜头 180 度                                     |
| IPS 显示屏 | 彩色显示屏(240*240)                                  |
| 录像分辨率   | 1080P 2K 4K                                     |
| 像素      | 2M 4M 8M 12M                                    |
| 录像文件格式  | MP4   |
| 照片格式    | JPG   |
| 视频预览    | 开关  |
| 循环录像    | 关、1、3、5、10、15、30、分钟                             |
| 时间设定    | 支持  |
| 按键音     | 开、关   |
| 音量控制    | 关、低、中、高   |
| 语言      | 英、简体中、繁体中、日、韩、俄、法、德、葡萄牙、意大利、西班牙语、泰              |
| 交流频率    | 50Hz、60Hz                                       |
| 自动关屏    | 关 3 分钟、5 分钟、10 分钟                               |
| 格式化     | 确认取消  |
| 工作湿度    | 30%   |
| 工作温度    | +65-20°C  |
| 供电      | USB 电压 5V, 电流 >1A<br>USB 整机待机电流: <5.44mA        |
| 机电流     | 电池 待机电流: <39.1uA                                |
| 低电提示    | 3.48v   |
| 电源功耗    | BAT3.7V//<262mA/K0.97w<br>/JUSB5V/s637mA/K3.68W |
| 内存卡     | TF 卡, 最大支持 128G                                 |

注意: 本产品保留设计和规格更改权恕不另行通知。

扫描下面二维码进行 APP 下载安装



WiFi: L 开头

密码: 88888888

1. 长按 M 键打开 WIFI 名称

2. 短按两次 M 键是打开菜单 4 空选择网络 WIFI