

一、产品结构



- 1)WIFI键 2)M键 3)电源键 4)麦克风
5)镜头 6)显示屏 7)指示灯 8) TF卡槽
9)复位键/孔 10)USB 接口

二、按键及接口功能介绍

1. wifi 键

- 短按打开wifi/关 wifi
- 长按进入菜单模式 /再长按退出
- 进入菜单选项/短按为/上键选项

2.M 键

- 短按/录像/拍照模式切换
- 长按进入回放/视频照片 长按wifi键进入/删除 取消 再长按wifi键返回回放界面 长按m键退出回放界面
- 进入菜单选项/短按为/下键选项

3. 电源键

- 长按/开机/ 关机
- 短按/确认

4.麦克风

可以在视频和音频 录制中清晰地记录声音

5. 镜头

高清镜头GC-H63P

6.液晶显示

彩色液晶显示

7.指示灯

绿灯亮/工作

绿灯一闪一闪/录像

红灯亮/充电 红灯灭/充满

8.TF卡槽

设备最大支持128GTF卡, 如果内存卡插入后提示 错误或者不能正常录制, 请在菜单设置中格式化内存卡建议首次插入的时候格式化内存卡. 建议用U3内存卡

9.复位键/孔

当机器出现黑屏死机等情况时 用针短戳一下可重新启动

10.USB 接口

该端口可用于连接USB线进行充电以及在PC上查看或传输文件。当相机连接电缆和电源时, 相机会自动开机。

三、基本操作说明

1.USB 模式

设备使用USB 数据与电脑连接, 设备自动开机后屏幕显示存储器一个选项。

存储器: 在此模式下可进行视频文件或者照片文件的存取与查看;

四、产品参数与规格

IPS显示屏	彩色显示屏(172*320)
分辨率	1080p 720p
录像文件格式	AVI
照片格式	JPG
图片分辨率	3m、2m、1m
循环摄像	关、3分钟、5分钟、10分钟
白平衡	自动 日光 阴天 钨丝灯 荧光灯
曝光补偿	+1、+2、+6 +0 -1、-2 --6
录像声音	关、开
时间水印	关、开
视频预录	关、开
时间设定	支持
自动关机	关、1分钟、3分钟
语言	英、简体中、繁体中、日、韩、俄、法、德、葡萄牙、意大利、西班牙语、泰、土耳其、越南、波兰
交流频率	50Hz, 60Hz
格式化	关3分钟、5分钟、10分钟确认取消

工作湿度	30%
工作温度	+65-20 °
供电	USB电压5V,电流多1A
待机电流	USB整机待机电流:≤5.44mA 电池待机电流:≤39.1uA
低电提示	3.48V
电源功耗	BAT3.YV/-262mA/≤0.97 USB5V/s 637mA /=3.68W
内存卡	TF卡, 最大支持128G


扫描下面二维码进行APP下载安装



WiFi:ActionCam开头
密码: 88888888

1.短按wifi键打开WIFI界面

1. Product structure

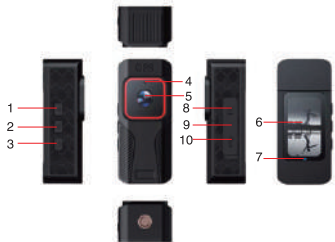

- 1) WiFi button 2) M button 3) Power button
4) Microphone 5) Lens 6) Display screen
7) Indicator light 8) TF card slot 9) Reset button/hole
10) USB port

2. Introduction to Buttons and Interface Functions

1. Wi-Fi key

- 1) Short press to turn WiFi on/off
- 2) Long press to enter menu mode / long press again to exit
- 3) Enter menu options / short press to select / up key to scroll options

2. M key

- 1) Short press to switch between video/photo modes
- 2) Long press to enter playback/video photo. Long press the WiFi button to enter/delete/cancel, then long press the WiFi button to return to the playback screen. Long press the M button to exit the playback screen
- 3) Enter menu options / short press for / down key to select options

3. Power button

- 1) Long press/Power on/Power off
- 2) Short press/Confirm

4. Microphone

Sounds can be clearly recorded in video and audio recordings

5. Lens

HD Camera GC-H63P

6. Liquid Crystal Display

Colour LCD display

7. Indicator light

Green light on/working Green light flashing/recording Red light on/charging Red light off/fully charged

8. TF card slot

The device supports a maximum of 128G TF cards. If an error is displayed or recording does not work normally after inserting the memory card, please format the memory card in the menu settings. It is recommended to format the memory card when first inserted. U3 memory cards are recommended.

9. Reset button/hole

When the machine experiences a black screen or crash, a short poke with a needle can restart it

10. USB interface

This port can be used to connect a USB cable for charging as well as to view or transfer files on a PC. When the camera is connected to a cable and power supply, it will automatically turn on.

3. Basic Operating Instructions

1. USB mode

The device uses USB data to connect to the computer, and after the device automatically turns on, the screen displays a storage option.

Memory: In this mode, video or photo files can be accessed and viewed

4. Product Parameters and Specifications

IPS display screen	Colour display screen (172*320)
Resolution	1080p 720p
Video file format	AVI
Photo format	JPG
Image resolution	3m, 2m, 1m
Loop recording	Off, 3 minutes, 5 minutes, 10 minutes
White balance	Auto daylight cloudy tungsten lamp fluorescent lamp
Exposure compensation	+1, +2, - +6 +0 -1, -2 - -6
Recording sound	Close, Open
Time watermark	Close, Open
Video pre-recording	Close, Open
Time setting	Support
Auto power off	Off, 1 minute, 3 minutes
Language	English, Simplified Chinese, Traditional Chinese, Japanese, Korean, Russian, French, German, Portuguese, Italian, Spanish, Thai, Turkish, Vietnamese, Polish
Communication frequency	50Hz, 60Hz
Format	Confirm cancellation in 3 minutes, 5 minutes, 10 minutes

Working humidity	30%
Operating temperature	+65-20 °
Power supply	USB voltage 5V, current over 1A
Standby current	USB complete device standby current: ≤5.44mA Battery standby current: ≤39.1uA
Low battery warning	3.48V
Power consumption	BAT3.YV/-262mA/≤0.97 USB5V/s 637mA /=-3.68W
Memory card	TF card, supports up to 128G

Scan the QR code below to download and install the app



WiFi: ActionCam start
Password: 88888888

1. Press the WiFi button briefly to open the WiFi interface