

# 77x112.5mm

## 一、产品结构



- 1)WIFI键
- 2)M键
- 3)电源键
- 4)麦克风
- 5)镜头
- 6)显示屏
- 7)指示灯
- 8) TF卡槽
- 9)复位键/孔
- 10)USB 接口

## 二、按键及接口功能介绍

### 1. wifi 键

- 1)短按打开wifi/关 wifi
- 2) 长按进入菜单模式 /再长按退出
- 3) 进入菜单选项/短按为/上键选项

### 2.M 键

- 1)短按进入录像/普通拍照模式切换
- 2)长按进入回放/视频/照片 进入播放界面 长按wifi按键进入/删除当前/全部删除/格式化 再长按wifi键返回播放界面 长按m键退出回放界面
- 3) 进入菜单选项/短按为/下键选项

## 3. 电源键

- 1)短按/开机 长按/关机

- 2) 短按/确认

## 4.麦克风

可以在视频和音频 录制中清晰地记录声音

## 5. 镜头

高清镜头GC6603

## 6.液晶显示

彩色液晶显示

## 7.指示灯

绿灯亮/工作

绿灯一闪一闪/录像

红灯亮/充电 红灯灭/充满

## 8.TF卡槽

设备最大支持128GTF卡，装入内存卡和拔内存卡时，会自动关机开机，如果内存卡插入后提示 错误或者不能正常录制，请在菜单设置中格式化内存卡建议首次插入的时候格式化内存卡。建议用U3内存卡

## 9.复位键/孔

当机器出现黑屏死机等情况时 用针短戳一下可重新启动

## 10.USB 接口

该端口可用于连接USB线进行充电以及在PC上查看或传输文件。当相机连接电缆和电源时，相机会自动开机。

## 三、基本操作说明

### 1.USB 模式

设备使用USB 数据与电脑连接，设备自动开机后屏幕显示存 USB存储/电脑摄像头/仅充电 三个选项：

**存储器：**在此模式下可进行视频文件或者照片文件的存取与查看；

**电脑摄像头：**在此模式下可用于电脑摄像头进行使用；

**仅充电：**仅用于电脑给设备供电。

## 四、产品参数与规格

IPS显示屏	彩色显示屏(172*320)
分辨率	1080P 2K 4K
录像文件格式	MP4
照片格式	JPG
循环录像	3分钟.5分钟.10分钟.关
畸变矫正	关闭、开启
防抖	关闭、普通防抖、地平线增稳
视频预录	关闭、开启
曝光补偿	+0.5 - +3.0 +0.0 -0.5 - -3.0
白平衡	自动 日光 阴天 钨丝灯 荧光灯 潜水
色彩	正常 黑白 棕褐色 暖色调 冷色调
ISO	自动 100 200 400 800 1600 3200
WDR	关闭、开启
录影声音	关闭、开启
录影音量	1、2、3、4、5、6、7、8
录音去噪	关闭、开启
时间水印	关闭、开启
移动侦测	关闭、开启
延时录影	关闭、5s、10s、15s、30s

测光	平均测光 中央测光 点测光
时间日期	日期、时间设置、时间格式
录像/拍照指示灯	关闭、开启
屏幕休眠	关闭 30s 1分钟 3分钟 5分钟
GPS	关闭、开启
GPS 信息	星数、计时、速度、经度、方向、纬度
拍照分辨率	2m、3m、5m、8m、10m、12m - 52m
快门速度	自动、1/30s、1s
倒计时	关闭、3s、5s、10s
语言	英、简体中、繁体中、日、韩、俄、法、德、葡萄牙意大利、西班牙、泰、波兰、土耳其、越南
抗闪烁	50Hz、60Hz
自动关机	关1分钟2分钟3分钟5分钟10分钟
格式化	否 是
工作湿度	30%
工作温度	+65-20 ° C
供电	USB电压5V,电流1AUSB整机
待机电流	待机电流:≤5.44mA 电池待机电流:≤310mA
低电提示	3.3V

电源功耗	BAT3.TV/262mA0.97W USB5V/s 637mA /3. 68W
内存卡	TF卡，最大支持128G

扫描下面二维码进行APP下载安装



WIFI:Q7开头  
密码: 88888888

1.短按wifi键打开WIFI界面

## 1. Product Structure



- 1)WIFI button
- 2)M button
- 3)Power button
- 4)Microphone
- 5)Lens
- 6)Display screen
- 7)Indicator light
- 8)TF card slot
- 9)Reset button/hole
- 10)USB port

## 2. Introduction to Buttons and Interface Functions

### 1. wifi button

- 1) Short press to turn WiFi on/off
- 2) Long press to enter menu mode / long press again to exit
- 3) Enter menu options / short press to select / up key to choose options

### 2.M key

- 1) Short press to switch between recording/normal photo mode
- 2) Long press to enter playback/video/photo to access the playback screen; long press the WiFi button to enter/delete current/all items/format; long press the WiFi button again to return to the playback screen; long press the M button to exit the playback screen
- 3) Enter menu options/short press to select/down key to choose options

## 3. Power button

- 1) Short press/Power on Long press/Power off
- 2) Short press / confirm

## 4. Microphone

Sounds can be clearly recorded in video and audio recordings

## 5. Lens

HD Lens GC6603

## 6.Liquid Crystal Display

Colour LCD display

## 7. Indicator light

Green light on/working

Green light flashing/recording

Red light on/charging Red light off/fully charged

## 8. TF card slot

The device supports up to a 128GB TF card. It will automatically shut down and restart when inserting or removing the memory card. If an error is displayed or recording does not work properly after inserting the memory card, please format the memory card in the menu settings. It is recommended to format the memory card upon first use. A U3 memory card is recommended.

## 9. Reset button/hole

When the machine experiences a black screen or crash, a short poke with a needle can restart it

## 10. USB interface

This port can be used to connect a USB cable for charging as well as to view or transfer files on a PC. When the camera is connected to the cable and power, it will automatically turn on.

## 3. Basic Operating Instructions

### 1. USB mode

The device uses USB to connect data with the computer, and after the device automatically powers on, the screen displays three options: 'Store to USB/Computer Camera/Charge Only'.

**Memory:**In this mode, video or photo files can be accessed and viewed

**Computer camera:**In this mode, it can be used with a computer camera.

**Charge only:**For powering the device from a computer only.

## 四、产品参数与规格

IPS display screen	Colour display screen (172*320)
Resolution	1080P 2K 4K
Video file format	MP4
Photo format	JPG
Loop recording	3 min, 5 min, 10 min, Off
Distortion correction	Off, On
Image stabilization	Off, Standard Stabilisation, Horizon Stabilisation
Video pre-recording	Off, On
Exposure compensation	+0.5 - +3.0 +0.0 -0.5 - -3.0
White balance	Auto Daylight Cloudy Tungsten Fluorescent Underwater
Colour	Normal Black & White Sepia Warm Tone Cool Tone
ISO	Auto 100 200 400 800 1600 3200
WDR	Off, On
Video audio	Off, On
Video volume	1、2、3、4、5、6、7、8
Audio noise reduction	Off, On
Timestamp watermark	Off, On
Motion detection	Off, On
Time-lapse recording	Off, 5s, 10s, 15s, 30s

Light metering	Average metering, centre-weighted metering, spot metering
Date and time	Date, time settings, time format
Video/photo indicator light	Off, on
Screen sleep	Off, 30s, 1 minute, 3 minutes, 5 minutes
GPS	Off, on
GPS information	Number of stars, timer, speed, longitude, direction, latitude
Photo resolution	2m, 3m, 5m, 8m, 10m, 12m - 52m
Shutter speed	Auto, 1/30s, 1s
Countdown	Off, 3s, 5s, 10s
Language	English, Simplified Chinese, Traditional Chinese, Japanese, Korean, Russian, French, German, Portuguese, Italian, Spanish, Thai, Polish, Turkish, Vietnamese
Anti-flicker	50Hz, 60Hz
Auto power off	Off 1 minute 2 minutes 3 minutes 5 minutes 10 minutes
Formatting	No Yes
Operating humidity	30%
Operating temperature	+65-20 ° C
Power supply	USB voltage 5V, current 1A, USB device
Standby current	Standby current: ≤5.44mA, Battery standby current: ≤310mA
Low battery warning	3.3V

Power consumption	BAT3.TV/262mA0.97W USB5V/s 637mA /3. 68W
Memory card	TF card, supports up to 128G

Scan the QR code below to download and install the app



WIFI: starts with Q7  
Password: 88888888

1. Press the WiFi button briefly to open the WiFi interface