

# Portable video recorder

## Instruction Manual



### 1. Product Structure

#### Q Product Description



- 1) Video/confirm button
- 2) Power button/screen off button
- 3) Up button
- 4) Down arrow key
- 5) M menu key
- 6) Microphone
- 7) Indicator light
- 8) Horn
- 9) Buckle
- 10) Turn left and right 90 degrees
- 11) Front and rear lenses
- 12) Display screen
- 13) USB interface
- 14) Reset button/hole
- 15) TF card slot
- 16) Battery installation

### 2. Introduction to button and interface functions

#### 1. Record/Save/Confirm button

1) Short press to start recording, then short press to stop recording and save.

#### 2. Power button/off screen button

- 1) Long press to turn on/off
- 2) Short press the power button to turn off the screen

#### 3. Up key

- 1) Up selection key
- 2) Short press to zoom in on the focal length
- 3) Long press to enter photo mode/press confirm button/take photo

#### 4. Press the down button

- 1) Down selection key
- 2) Short press to reduce the focal length.
- 3) Long press/first solo recording A (inside)
- 4) Long press/second individual recording B (front)
- 5) Long press/before and after the third double recording

#### 5. M/Menu key

- 1) Short press the M key to enter recording options
- 2) Short press the M key twice to enter the menu with four empty mode options/playback settings and formatted network
- 3) Enter playback/pre video/press M key to select/post video
- 4) Enter the video lock and play the video. Long press the M key to select lock/you can quickly find the locked file in the locked recording
- 5) Enter the setting mode selection/setting
- 6) Entering formatting can clear all files and format them
- 7) Enter the network/open the app/connect to WIFI

#### 6. Microphone

Can record sound clearly in video and audio recordings

#### 7. Indicator lights

- Blue light on/working
- Blue light flashing/recording or recording
- Red light on/charging red light off/fully charged

#### 8. Speaker

1510 large magnetic horn

#### 9. Buckle

Can be hung around the neck for video and audio recording

#### 10. Turn left and right 90 degrees

Can rotate 90 degrees left and right

#### 11. Front and rear lenses

- 1) 4K within 4K before recording separately
- 2) Dual recording 2k+2k

#### 12. LCD display

Color LCD display

#### 13. USB interface

This port can be used to connect a USB cable for charging and to view or transfer files on a PC. When the camera is connected to the cable and power supply, the camera will automatically turn on.

#### 14. Reset button/hole

When the machine experiences a black screen or crashes, short poke it with a needle to restart it.

#### 15. TF card slot

The device supports a maximum of 128GTF card. If there is an error message or recording failure after inserting the memory card, please format the memory card in the menu settings. It is recommended to format the memory card when inserting it for the first time. Suggest using U3 memory card

#### 16. Battery installation

18650LI – ION 2000mAh

### 3. Basic operating instructions

#### 1. USB mode

The device uses USB data to connect to the computer, and after the device automatically powers on, the screen displays three options: memory/PC camera/video mode

**Storage:** In this mode, video files or photo files can be accessed and viewed;

**PC Camera:** In this mode, it can be used for computer cameras;

**Video mode:** Only used for powering devices from computers.

Front and rear lenses	Rotating lens 90 degrees
IPS display screen	Color display screen (240 * 240)
Fixed resolution	2K(2560*1440) 4K(3840*2160)
pixel	2M 4M 8M 12M
Video file format	MP4
Photo format	JPG
Video pre recording	switch
loop recording	Off, 1, 3, 5, 10, 15, 30, minute
Time Setting	support
keypress sound	On, Off
Volume Control	Off, low, medium, high
language	English, Simplified Chinese, Traditional Chinese, Japanese, Korean, Russian, French, German, Portuguese, Italian, Spanish, Thai
communication frequency	50Hz, 60Hz
Automatically turn off	Close for 3 minutes, 5 minutes,

the screen	10 minutes
format	Confirm Cancel
Jiangzuo humidity	30%
Operating Temperature	+65-20°C
power supply	USB voltage 5V, current ≥ 1A
standby current	Lush8 machine standby current: ≤ 5.44mA Battery standby current: ≤ 39.1uA
Low power warning	3.48V
Power consumption	BAT3.7V/<262mA /K0.97W JUSB5V/s637mA/<3.68W
memory card	TF card, supports up to 128GB

Attention: This product reserves the right to make design and specification changes without prior notice.

Scan the QR code below to download and install the APP



WiFi: Starting with L

Password: 88888888

1. Long press the M key to open the WIFI name

2. Short press the M key twice to open the menu and select Network WIFI

# 便携录像机 说明书



## 一、产品结构 Q 产品说明



- 1) 录像/确认键 2) 电源键/关屏键 3) 向上键
- 4) 向下键 5) M 菜单键 6) 麦克风
- 7) 指示灯 8) 喇叭 9) 挂扣
- 10) 左右转向 90 度 11) 前后镜头 12) 显示屏
- 13) USB 接口 14) 复位键/孔 15) TF 卡槽
- 16) 电池安装

## 二、按键及接口功能介绍

### 1. 录像/保存键/确认键

1) 短按开始录像, 再短按停止录像+保存。

### 2. 电源键/关屏键

- 1) 长按可开机/关机
- 2) 短按开关键为关屏

### 3. 上键

- 1) 向上选择键
- 2) 短按放大焦距。
- 3) 长按进入拍照模式/按确认键/拍照

### 4. 下键

- 1) 向下选择键
- 2) 短按可缩小焦距。
- 3) 长按/第一次单独录像 A (内)
- 4) 长按/第二次单独录像 B (前)
- 5) 长按/第三次双录像前后

### 5.M/菜单键

- 1) 短按 M 键进入录音选项
- 2) 短按两次 M 键进入菜单四空模式选项/回放 设置 格式化 网络
- 3) 进入回放/前视频/按 M 键选择/后视频
- 未加锁录像, 加锁录像, 图片文件, 录音文件
- 4) 进入视频加锁 播放视频 长按 M 键选择加锁/可以在加锁录像中快速找到已加锁文件
- 5) 进入设置模式选择/设置
- 6) 进入格式化可以把所有文件清除 格式化
- 7) 进入网络/打开 APP/连接 WIFI

### 6. 麦克风

可以在视频和音频 录制中清晰地记录声音

### 7. 指示灯

蓝灯亮/工作

蓝灯一闪一闪/录像或者录音

红灯亮/充电 红灯灭/充满

### 8. 喇叭

1510 大磁喇叭

### 9. 挂扣

可以挂在脖子上录像录音

### 10. 左右转向 90 度

可以左右旋转 90 度

### 11. 前后镜头

- 1) 单独录像 前 4K 内 4K
- 2) 双录像 2k+2k

### 12. 液晶显示

彩色液晶显示

### 13. USB 接口

该端口可用于连接 USB 线进行充电以及在 PC 上查看或传输文件。当相机连接电缆和电源时, 相机会自动开机。

### 14. 复位键/孔

当机器出现黑屏死机等情况时 用针短戳一下可重新启动

### 15. TF 卡槽

设备最大支持 128GTF 卡, 如果内存卡插入后提示 错误或者不能正常录制, 请在菜单设置中格式化内存卡建议首次插入的时候格式化内存卡。建议用 U3 内存卡

### 16. 电池安装

18650LI - ION 2000 毫安

## 三、基本操作说明

### 1.USB 模式

设备使用 USB 数据与电脑连接, 设备自动开机后屏幕显示存 储器 /PC 摄像/视频模式' 三个选项:

**存储器:** 在此模式下可进行视频文件或者照片文件的存取与查看;

**PC 摄像:** 在此模式下可用于电脑摄像头进行使用;

**视频模式:** 仅用于电脑给设备供电。

前后镜头	可旋转镜头 90 度
IPS 显示屏	彩色显示屏 (240*240)
分辨率 固定	2K(2560*1440) 4K(3840*2160)
像素	2M 4M 8M 12M
录像文件格式	MP4
照片格式	JPG
视频预览	开关
循环录像	关、1、3、5、10、15、30、分钟
时间设定	支持
按键音	开、关
音量控制	关、低、中、高
语言	英、简体中、繁体中、日、韩、俄、法、德、葡萄牙、意大利、西班牙语、泰
交流频率	50Hz、60Hz
自动关屏	关 3 分钟、5 分钟、10 分钟
格式化	确认取消
工作湿度	30%
工作温度	+65-20°C
供电	USB 电压 5V, 电流 ≥ 1A
待机电流	lusB 整机待机电流: ≤ 5.44mA 电池待机电流: ≤ 39.1uA
低电提示	3.48V
电源功耗	BAT3.7V/ < 262mA / K0.97W JUSB5V/ s637mA/ < 3.68W
内存卡	TF 卡, 最大支持 128G

注意: 本产品保留设计和规格更改权恕不另行通知。

扫描下面二维码进行 APP 下载安装



### WIFI 开关

密码: 88888888

1. 长按 M 键打开 WIFI 名称

2. 短按两次 M 键是打开菜单 4 空选择网络 WIFI。