


User's Manual

使用手册



使用前请仔细阅读此说明书保证产品功能正确使用
并保留手册以后查询

产品介绍

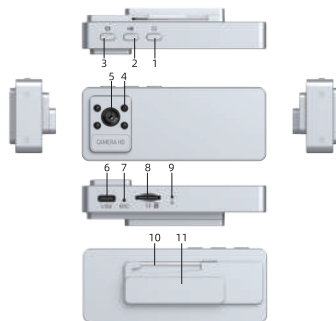

注:外形图片以实物为准

● 功能介绍

- | | |
|-----------------|--------|
| 1.电源键/WIFI长按打开键 | 7.收音孔 |
| 2.录像键 | 8.TF卡槽 |
| 3.拍照键 | 9.复位孔 |
| 4.夜视灯 | 10.胸针 |
| 5.镜头 | 11.磁铁 |
| 6.USB接口 | |

● 产品说明

1.电源键:

短按开机(蓝灯长亮)再次短按关机(蓝灯灭)开机后,长按电源键2-3s,是打开WIFI(蓝灯指示闪烁2下),再次长按2-3s,关闭WIFI(蓝灯指示闪烁5下),然后蓝

灯长亮,WIFI打开录像工作中(蓝灯指示慢闪)

2.录像键:

短按1下开始录像状态(蓝灯指示慢闪)再次短按录像键停止录像状态(蓝灯指示灯长亮)

3.拍照键:

短按1下,开始拍照(蓝灯指示灯闪烁1下),拍照完成后蓝灯长亮

5.镜头:

低电,镜头坏,无卡开机状态下,主机自动闪烁5次,关机

6.USB接口:

充电时,红蓝灯长亮,充满后蓝灯关闭

9.复位孔:

遇到死机或者卡机,用别针复位可重启

10.胸针:

用于别在胸前衣服上

11.磁铁:

别在胸前衣服的基础上,给予磁铁吸力加固防止掉

声明

本手册中提及的产品规格及信息仅供参考,本产品软件、硬件及说明书等有任何修改,本公司拥有最终解释权。

请用户在使用此产品过程中,自行对资料进行备份,以免造成资料丢失;本公司不对使用过程中的资料丢失承担责任。

本产品内置聚合物电池,禁止将本产品投掷于火中,以免发生爆炸,禁止将本产品浸入水中,本产品不具备防水功能。

请用户在国家法律允许的范围内使用本产品,请勿将本产品用于非法用途,本公司不对使用本产品所产生违法行为引起的纠纷和后果负责。

注:本产品系统软件会占用一部分容量空间,与标称容量会有差异属于正常现象。

● 连接电脑

本机用数据线和电脑连接,或者拔下内存卡插读卡器,再插电脑!数秒后电脑将会识别,并弹出“可移动磁盘”或“U盘”等标识,然后点击,AUDIO文件夹里面是录音,VIDEO文件夹里面是录像,点击播放即可,如录像不流畅请下载[暴风影音]播放。

● 修改时间-time.txt

先将TF内存卡,插入本机卡槽后,用数据线把机子和电脑连接,电脑出现“可移动磁盘”点开它,下面会出现时间文档“time.txt”,双击点开会出现一组时间格式数字[切记;修改时间格式不能改动,只能改数字]

1如格式显示2022-01-0101: 01: 01 N

(N为无时间水印显示)

2.改格式显示2022-01-01 01: 01: 01 Y

(Y为有时间水印显示)

3.系统默认是无时间水印显示,如果需要时间水印显示,那就把时间格式尾部的N改成Y,再改动数字(年-月-日时:分:秒),然后点击文档左上角的“文件”选项,选择“保存”后将本机从电脑弹出,时间设置完成。

胸牌记录仪 产品合格证



检验: 合格



QC编号: _____

扫描下方二维码进行APP下载安装



SSID: L15开头
密码: 12345678


长按电源键2-3s, 打开WIFI
再次长按电源键2-3s, 关闭WIFI
(WIFI可选)

User's Manual



Please read this manual carefully before use to ensure the correct use of product functions and keep the manual for future query

Product introduction

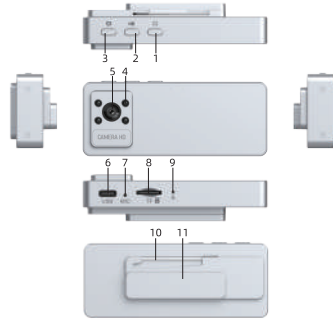

Note: The appearance picture is subject to the actual

● Function introduction

- | | |
|--|-------------------------|
| 1. Power button/WIFI long press and hold the open button | 6. USB interface |
| 2. Video recording button | 7. Sound receiving hole |
| 3. Photo button | 8. TF card slot |
| 4. Night vision lights | 9. Reset hole |
| 5. Lens | 10. Chest needle |
| | 11. Magnets |

● Description

1. Power button:

Short press to turn on (blue light on) and then short press to turn off (blue light off). After turning on the device, long press the power button for 2-3 seconds to turn on WIFI (blue light flashing twice). Long

press again for 2-3 seconds to turn off WIFI (blue light flashing five times), then the blue light will stay on, and WIFI will start recording (blue light indicating slow flashing)

2. Video recording button:

Short press 1 time to start recording (blue light indicates slow flashing), then short press the recording button again to stop recording (blue light indicates long light)

3. Photo button:

Short press once to start taking photos (the blue light indicator flashes once), and the blue light will remain on for a long time after the photo is taken

5. Lens:

Low battery, broken lens, no card in power on state, the host will automatically flash 5 times and shut down

6. USB interface:

When charging, the red and blue lights stay on, and when fully charged, the blue light turns off

9. Reset hole:

Encountering a crash or freeze, reset with a safety pin to restart

10. brooch:

Used to fasten on chest clothes

11. Magnet:

On the basis of wearing clothes on the chest, reinforce them with magnetic attraction to prevent them from falling off

● Connecting the PC

This computer is connected to the computer with a data cable, or unplug the memory card to insert the card reader, and then plug in the computer! After a few seconds, the computer will recognize it and pop up "Removable Disk" or "U Disk" and other marks, and then click to open it. Audio recording is in AUDIO folder and video recording is in VIDEO folder. Click to play it. If the video is not smooth, please download [Storm Video] to play it.

● Modified on - time.txt

First insert the TF memory card into the card slot of the unit, and then use the data cable to

When the machine is connected to the computer, a "removable disk" point appears on the computer. Open it, and the time document "time.txt" will appear below. Double click

A group of time format numbers appear at the meeting at [remember; when modifying

Format cannot be changed, only numbers can be changed]

1 If the format displays 2022-01-0101: 01: 01 N

(N is displayed without time watermark)

2. Change the format to display 2022-01-01 01: 01: 01 Y

(Y is displayed with time watermark)

3. The system defaults to no time watermark display. If time is required

For watermark display, change the N at the end of the time format to Y, and then

Move the number (year month day hour: minute: second), and then click the text

"File" option in the upper left corner of the file, select "Save" and

The computer pops up from the computer, and the time setting is completed.

statement

The product specifications and information mentioned in this manual are for reference only. The company has the final right to interpret any modification of the software, hardware and instructions of this product.

Users are requested to back up the data themselves during the use of this product to avoid data loss; The company will not be responsible for the loss of data in the use process.

This product is equipped with a polymer battery. It is prohibited to throw this product into fire to avoid explosion. It is prohibited to immerse this product in water. This product has no waterproof function.

Users are requested to use this product within the scope permitted by national laws. Please do not use this product for illegal purposes. Our company will not be responsible for disputes and consequences arising from illegal acts arising from the use of this product.

Note: The system software of this product will occupy a part of the capacity space, and it is normal that there will be differences with the nominal capacity.

Intelligent HD recorder Product certificate

QC No: _____



Scan the QR code below for app download and installation



SSID: Starting with L15
Password: 12345678

(WIFI optional)

Long press the power button for 2-3 seconds to turn on WIFI, then long press the power button again for 2-3 seconds to turn off WIFI