

Pocket Camera



Instruction Manual


I. Product Portfolio



Qproduct description

- 1) Video/Power Button
- 2) Left Button
- 3) Right Button
- 4) Microphone
- 5) Indicator Light
- 6) Speaker
- 7) 270° Forward/Reverse Turn Signal
- 8) Display Screen
- 9) USB Port
- 10) TF card slot
- 11) Battery installation
- 12) Reset button/hole
- 13) Lens

II. Feature Overview

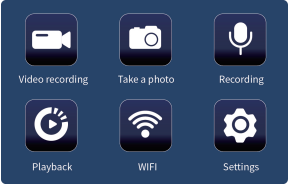

Rotate the screen 90 degrees to power on and access the menu; then swipe up to return to the previous menu.

- 1. Click on "Video/Audio" to enter the video/audio recording mode. Short press the power button to start recording. Press it again to end and save. Long press the power button to turn the device on/off.
- 2. Click "Take Photo" to enter the photo-taking mode, and briefly press the power button to take and save the photo.
- 3. Enter playback/unlocked videos, locked videos, image files, audio files, enter video playback with lock, slide down the screen to select lock/delete, and you can quickly find locked files in locked videos.
- 4. Enter the network/open the Wind Recorder/connect to WIFI.
- 5. Click on "Settings" and swipe left to enter the formatting option, where you can clear and format all files.

III. Key and Interface Functions Overview

1 Video/Save Key / Power Button

- 1) Short press to start recording; then short press again to stop recording and save.
- 2) Long press to turn on the device; it will shut down automatically after a few seconds.

2 – Left Button

- 1) Press and hold the left arrow key to navigate to your desired location.
- 2) Press the left turn button (to rotate the lens to the right) when recording video or taking photos.

3 – Right-click

- 1) Press and hold the right arrow key to navigate to your desired location.
- 2) Press the right turn button (to rotate the lens left) when recording video or taking photos.

4 microphones

It allows for clear recording of sound during video and audio sessions.

5 indicator lights

Blue light on/Operating

The blue light flashes – video or audio recording?

Red light on / Charging

Red light off/Full charge

6 speakers

1510 Large Loudspeaker

7-way front and rear steering (270°)

Can be rotated 270 degrees

8-inch display

Color LCD display

9 USB ports

This port can be used to connect a USB cable for charging or to view or transfer files on a PC. When...

When the machine is connected to a power source, it will automatically start up.

10 TF card slot

The device supports up to a 128 GB TF card. If an error is displayed or if the device fails to record properly after inserting a memory card, please format the memory card in the Menu Settings; it is recommended to format the memory card the first time you insert it.

It is recommended to use an U3 memory card.

11 Battery Installation

18650LI-10N – 2000 mAh

12 Reset Keys/Slots

When the machine displays a black screen or freezes, briefly touching it with a needle can restart it.

13mm lens

135° wide-angle lens; 90° vertical flip mechanism

IV. Product Parameters and Specifications

Left/Right Lens	Can be rotated 270 degrees
IPsdisplay screen	Color display screen (320×240)
resolution ratio	1080FHD
Camera Resolution	16M, 12M, 10W, 8W, 5M
Follow-on Switch	switch
Cyclic recording	Duration: 1 min, 3 min, 5 min
exposure compensation	+2.0, +5/3, +4/3, +1.0, +2/3, +1/3, +0.0,

	-1.3, -2/3, -1.0, -4/3, -5/3, -2.0
Audio recording	Turn on/Off
Button click sound	Turn on/Off
Date Label	Turn on/Off
Date/Time	support
language	English, Simplified Chinese, Traditional Chinese, Japanese, French, German, Korean, Italian, Portuguese, Russian, Spanish, Thai
formatting	Confirm/Cancel
default setting	Confirm/Cancel
Work environment humidity	30%
working temperature	+65-20°C
supply electricity	USB voltage: 5 V; Current> 1 A; Total USB idle current: <5.44 mA
Electromechanical current	Battery standby current: <39.1 μA
Low battery alert	3.6v
Power consumption	BAT3.7V/<262mA/K0.97w/JUSB5 V/s637mA/K3.68W
memory card	TF card – supports up to 128 GB

V. Gestural Functionality

	The subject performs this gesture facing the camera; the camera then follows the subject and stops following after 3 seconds; the camera rotation will be automatically corrected.
	The subject performs this gesture facing the camera lens; the camera then follows the subject and stops following after 10 seconds; the camera rotation will be automatically corrected.
	When the character makes this gesture, the camera stops following them.



WiFi products, please scan the code to download the APP

SSID:Qbegin
KEY: 12345678
Swipe up on the screen to access the menu open wifi

口袋相机



使用说明书

一、产品结构



Q 产品说明

- 1)录像/电源键 2)向左键 3)向右键 4)麦克风 5)指示灯
6)喇叭 7)前后转向 270 度 8)显示屏 9)USB 接口
10)TF 卡槽 11)电池安装 12)复位键/孔 13) 镜头

二、功能介绍



旋转屏幕 90 度开机并进入菜单，屏幕上滑返回上一个菜单

- 1、点击录像/录音进入录像/录音模式，短按关机键开始录像/录音，在次短按结束并保存，长按开关键，可开机/关机。
- 2、点击拍照进入拍照模式，短按关机键为拍照并保存。
- 3、进入回放/未加锁录像，加锁录像，图片文件，录音文件/，进入视频加锁播放视频，屏幕下滑选择加锁/删除，可以在加锁录像中快速找到已加锁文件。
- 4、进入网络/打开录风者/连接 WIFI。
- 5、点击设置左滑进入格式化可以把所有文件清除格式化。

三、按键及接口功能介绍

1 录像/保存键 /电源键

- 1)短按开始录像，再短按停止录像+保存。
- 2)长按可开机几秒后自动关机。

2 向左键

- 1) 短按向左键可以定位你想要的位置
- 2) 录像拍照时按左转向键（镜头是往右旋转）

3 向右键

- 1) 短按向右键可以定位你想要的位置
- 2) 录像拍照时按右转向键（镜头是往左旋转）

4 麦克风

可以在视频和音频，录制中清晰地记录声音

5 指示灯

蓝灯亮/工作

蓝灯一闪一闪/录像或者录音

红灯亮/充电

红灯灭/充满

6 喇叭

1510 大磁喇叭

7 前后转向 270 度

可以旋转 270 度

8 显示屏

彩色液晶显示

9 USB 接口

该端口可用于连接 USB 线进行充电以及在 PC 上查看或传输文件。当相

机连接电源时，相机会自动开机。

10 TF 卡槽

设备最大支持 128GTF 卡，如果内存卡插入后提示 错误或者不能正常录制，请在菜单设置中格式化内存卡建议首次插入的时候格式化内存卡

建议用 U3 内存卡

11 电池安装

18650LI-10N 2000 毫安

12 复位键/孔

当机器出现黑屏死机等情况时，用针短戳一下可重新启动

13 镜头

大广角 135 度 镜头上下翻转 90 度

四、产品参数与规格

左右镜头	可以旋转 270 度
IPS 显示屏	彩色显示屏 (320*240)
分辨率	1080FHD
拍照分辨率	16M、12M、10W、8W、5M
跟随开关	开关
循环录影	关、1 分钟、3 分钟、5 分钟
曝光补偿	+2.0、+5/3、+4/3、+1.0、+2/3、+1/3、+0.0、-1.3、-2/3、-1.0、-4/3、-5/3、-2.0
录音音频	开/关
按键声音	开/关
日期标签	开/关
日期/时间	支持
语言	英、简中、繁中、日、法、德、韩、意大利、葡萄牙、俄、西班牙、泰
格式化	确认/取消
默认设置	确认/取消
工作湿度	30%
工作温度	+65 -20°C
供电	USB 电压 5V，电流>1AUSB 整机待机电流<5.44mA
机电流	电池待机电流:<39.1uA
低电提示	3.6v
电源功耗	BAT3.7V/<262mA/K0.97w/JUSB5V/s63 7mA/K3.68W
内存卡	TF 卡，最大支持 128G

五、手势功能

	人物在相机镜头正面做出此手势相机跟随人物，离开镜头 3 秒后停止跟随，镜头旋转会自动矫正
	人物在相机镜头正面做出此手势相机跟随人物，离开镜头 10 秒后停止跟随，镜头旋转会自动矫正
	人物做出此手势相机停止跟随



wifi产品请扫码下载APP

SSID: Q 开头
KEY: 12345678
屏幕上从下往上滑进入菜单
打开 wifi