



记录仪产品说明书

独家三路摄像头

请通电开机再插上TF卡格式化再使用




打开WIFI 长按上键
SSID:CDR开头
WPAZ:12345678

一、产品规格说明

DDR	内置64M
FLASH	8M SPI norflash
显示屏	2.0英寸IPS高清屏
显示屏分辨率	800X480 像素
外置端口	Type-c USB 5V/2A电源接口 最大支持64G Class10 TF卡 2.5mm三节数字后摄像头接口
扬声器	8欧1瓦单声道15*10mm扬声器
MIC	4015标准全指向麦克风
功能特性:	
GPS轨迹	不支持
AV OUT	不支持
后摄像头	6米线长/2.5mm接口
拍照	支持
镜头旋转	不支持
动态范围调节	支持
HDR	支持
倒车全屏	支持
视频格式	AVI
图片格式	JPG
存储压缩方式	H.264
电池类型	150mAh聚合物锂电池
语言支持	支持多国语言
重力感应	支持

移动侦测	支持
延时关机	支持
循环录像	支持不露秒
录音功能	支持
夜视补光灯	支持(手动开启)
停车监控	支持
拍摄分辨率	最高支持3M
工作环境:	
操作温度	-40°C~70°C
操作湿度	15-65%RH
存储温度	-40°C~70°C

二、按键功能介绍(图片仅供参考,以实物为准)

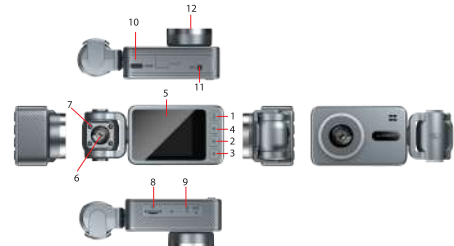

- 1) 电源键、确认键、OK键
- 2) 菜单键
- 3) 下翻键
- 4) 上翻键
- 5) 显示屏
- 6) 车内摄像头
- 7) 夜视灯
- 8) TF卡槽
- 9) 复位键
- 10) 电源接口
- 11) 后摄像头(可选)
- 12) 车前摄像头

录像时长按【M】进入菜单设置,具体项目如下:

记录仪录像菜单			
1	分辨率	4K 2K 1080P 720P	
2	循环录影	关/1分钟/2分钟/3分钟	
3	高动态范围HDR	开关	更好的反映人真实环境中的视觉效果
4	曝光补偿	-3,-2,-1,0,1,2,3	
5	运动检测	开关	待机状态下有物体移动会自动开机录制
6	录影音质	开关	打开或关闭同步录音
7	日期标签	开关	
8	车牌号码	开关	
9	重力感应	关/高中/低灵敏度	剧烈晃动或碰撞后,视频自动保存并不能被覆盖
10	停车监控	关/开	无人值守监控录像
11	日期/时间	调整年/月/日/时/分/秒	
12	自动关机	关/3分钟/5分钟/10分钟	
13	按键声音	关/开	
14	语言设置	简体中文/多国语	选择语言

15	光源频率	50HZ/60HZ	光源频率选择
16	格式化	确认/取消	格式化TF卡
17	定时关屏	关/30秒/1分钟/2分钟	
18	默认设置	确认/取消	
19	版本	机器软件版本号	

镜头两种显示画面之间切换,当使用侧挡时,自动全屏显示后摄像头画面。

复位键【RESET】

如记录仪发生开机及意外操作不正常故障,短按【RESET】可进入POWER OFF状态,再短按【OK】重启机器。

安装说明

- 1.请先测试好摄像头正常后再进行安装(若有后视镜摄像头,没有的可忽略)。
- 2.关闭汽车发动机。
- 3.将TF卡插入记录仪卡槽中。
【注意】请使用高速TF卡(Class10以上),容量不小于4GB,TF卡最大支持32GB。
- 4.将记录仪通过支架固定于汽车前挡风玻璃上。
- 5.将车载充电器插入汽车点烟器中。
【注意】布线时将充电线长线沿汽车门框边缘和车内地毯下铺设。
- 6.将后置摄像头安装在车镜后部,安装时注意上下方向。布线沿车镜边缘边缘埋线铺设。

- 1.【注意】后置摄像头有两种安装方法:
A.吸附于汽车后玻璃上方,可自行动手安装(无法实现倒车可视功能,只能实时录制车后方视频)。
B.找专业人士安装在车牌照上方,同时摄像头需要连接倒车灯电源(可实现倒车可视功能)。
- 2.调整镜头位置,确保最佳拍摄视角。
- 3.发动引擎,检查机器是否正常运行。

功能介绍

- 1.使用自动记录功能
启动汽车发动机,记录仪自动启动并开启记录功能。
关闭汽车发动机,记录仪自动保存记录内容并关机,记录的影像分段保存于TF卡上。当TF卡存满后,记录仪优先覆盖最早录制的影像。
【注意】
a.记录的时间段可自行在菜单中设置,范围为关闭和1/2/3分钟4档。
b.记录仪录像分段保存于TF卡内DCIMA与DCIM8文件夹中(若有车内摄像头或者后视镜摄像头)。
- 2.使用拍照功能
在开机状态下,短按【OK】键停止录像,短按【M】进入拍照模式,短按OK键即可拍照。如需切换回录像模式,短按【M】键即可。
- 3.使用移动侦测功能(运动检测)

机器进入录像状态,录像30秒后系统停止录像。如需退出移动侦测模式,菜单界面关闭运动检测功能。

- 4.重力感应功能
本机内置重力感应器(G-sensor),如果发生严重车辆碰撞,记录仪会锁定事故发生的前5秒和后10秒的影像资料,同时显示屏上方显示锁定的图标;被锁定的影像会另存为一个特殊文件,这个文件不会被循环覆盖。
【提示】重力感应器(G-sensor)支持灵敏度调节,可根据实际需要设置菜单中自行更改设置。
- 5.一键锁定功能
本机具备一键锁定功能,可将需要保留的影像锁定而不会被循环覆盖。在录像模式中,短按【M】键记录仪会将当前整段的视频影像锁定。
- 6.日期及时间设置
录像时长按【M】键进入菜单设置,找到日期/时间菜单,短按OK键进入,设置正确后再按【OK】键保存,最后短按【M】键退出菜单设置。
【注意】为了有效记录和取证,在使用本机前请立即设置正确的日期和时间。
- 7.文件回放
回放模式下按【OK】键回放。如需退出回放模式,再次短按【M】键。
- 8.倒车可视功能(后摄像头为可选配件)
首先,必须车充连接好记录仪,拉线摄像头黑红线连接倒车灯。插车机后会启动自动录像状态。在录像模式下切换R档屏幕会自动切换到后视镜,显示倒车影像。结束倒车后可视机器自动返回录像模式。
提醒:请先测试好摄像头正常后再进行安装。
- 9.停车监控模式(实现无人值守监控录像)
实现这个功能必须在车机连接供电的情况下,在主菜单中打开运动检测和停车监控功能,在待机状态下车辆受到震动或者前方有物体移动时,记录仪可根据重力感应模块G-SENSOR来感应,自动启动机器并自动锁定录像30秒,且自动保存录像文件。

常见问题

机器出现“档案错误”的提示	设置菜单->恢复出厂设置并格式化内存卡,一般是TF卡的问题
画面出现横条纹干扰	请选择正确的供电频率50HZ(PAL)
如何正确开启24小时停车监控功能	正常行驶时,请不要开启,容易造成自动关机或死机,停车后才需要开启,请配置降压线或移动电源

夜间拍摄的画面不清晰	记录仪拍摄依赖于外界较强的光源(比如路灯车灯),行业亦是如此
机器总是恢复到默认日期和时间	关机的情况下先充满电,可以用车充或者移动电源补充电量
录像文件出现漏秒,是什么原因	(请关闭移动侦测功能/打开循环录像功能)自行格式化卡,一定是用正规C10高速卡
为何录制过程中,机器一下子自动关机	请先关闭停车监控功能,使用环境的温度超过70°C也会导致自动关机
【注意】实践证明	大部分问题跟存储卡有关,小部分跟电源线有关

本车记录仪说明书所提供信息仅供参考,用户在使用过程中请以实物样机为准,若因使用本产品而导致罚款或交通事故,本公司不承担任何责任。



USER MANUAL

Exclusive 3 channels camera

Please power on and plug in the TF card for formatting before use




Open WIFI and long press the up button
SSID: Starting with CDR
WPAZ: 12345678

一、Product Specification

DDR	Built-in 64M
FLASH	8M SPI norflash
Display Screen	2.0 inch IPS HD screen
LCD resolution	800X480 pixels
External port	Type-c USB 5V/2A power adapter port Max support 64G Class10 TF card 2.5mm digital 720P rear view lens port
Speaker	Monophonic 15*10mm speaker
MIC	4015 Standard Omnidirectional Microphone
Features:	
GPS tracker	NO
AV OUT	NO
Rear camera	6M cable/2.5mm port
Photo	Support
Lens rotates	Not supported
WDR	Support
HDR	Support
Reversing visual	Support
Video format	AVI
Image format	JPG
Compression format	H.264
Battery	320mAh polymer lithium battery
Language	support multi-language
G-sensor	150 port

Motion Detection	Support
Delay shutdown	Support
Loop recording	Support,Do not leak seconds
Sound record	Support
Fill light for night vision	Support(Open manually)
Parking monitoring	Support
Camera resolution	Max support 3M
Working Environment	
Operating temperature	-40°C~70°C
Operating humidity	15-65%RH
Storage temperature	-40°C~70°C

二、Key Features (picture for reference only, mainly in kind)

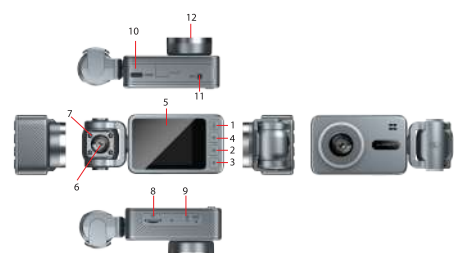

- 1) Power button, confirm button, OK button
- 2) Menu key
- 3) Flip down key
- 4) Flip up key
- 5) Display screen
- 6) Car interior camera
- 7) Night vision lamp
- 8) TF card slot
- 9) Reset button
- 10) Power interface
- 11) Rear view camera (optional)
- 12) Front camera

In video mode, short press 【M】 to enter video menu settings as follows:

Recorder Menu			
1	Resolution	4K 2K 1080P 720P	
2	Loop recording	Off/1minutes/2minutes/3minutes	
3	High dynamic range HDR	on/off	Improved image quality, Better visual effect
4	Exposure compensation	-3,-2,-1,0,1,2,3	
5	Motion detection	on/off	In standby mode, it will automatically record while a objective moves
6	Sound record	on/off	Turn on/off sound record
7	Temp stamp	on/off	
8	Car number	on/off	
9	G sensor	High/Medium/Low sensitivity	When car occur collision/accident, it will lock current video and can't be covered
10	Parking monitor	on/off	unattended surveillance
11	Date/time	Adjustment Years months date/hours Minutes seconds	
12	Automatic shut-down	Off/3minutes/5minutes/10 minutes	
13	keypad tone	on/off	
14	OSD language	Support multilingual	Choose a language

15	Light source frequency	50HZ/60HZ	Choose the Light source frequency
16	format	Confirm/ cancel	format TF card
17	Screen saver	Off/30seconds/1minute / 2minutes	
18	Default setting	Confirm/ cancel	
19	version	Machine software version number	

In photo mode, long press 【M】 to enter photo menu settings as follows:

1	Shooting method	Single shooting/2 seconds timer / 5 seconds timer / 10 seconds timer	
2	Resolution	1M/2M/3M	
3	Continuous shooting	on/ off	
4	Picture quality	High quality/standard/economy	
5	Acufance	Strong/standard/soft	
6	White balance	Automatic/sunlight/cloudy/tungsten lamp/fluorescent lamp	
7	ISO	Automatic/100/200/400	
8	Exposure compensation	-3, -2, -1, 0, 1, 2, 3	
9	Time stamp	Off/ Date	

1. Use the automatic recording function
Start the car engine, the recorder automatically starts to open the recording function. Close the car engine. The recorder automatically saves the contents of the log and shuts down. recorded video segments are stored on the TF card. When the TF card is full, the recorder will overwrite the oldest recorded image preferentially.
【Note】
a. Time segment of record can be set 1/2/3 minutes in the menu.
b. The video individually saved in the folder named "DCIMA" and "DCIM8" in TF card (package include rear view lens).
3. Use motion detection
In standby mode, enter the menu screen open the motion detection mode. When the lens is sensitive to the peripheral area of a moving object, the state machine into the camera, recording 30 seconds after the system stops recording. To exit the motion detection mode, in standby mode to enter the menu screen close motion detection mode.
4. G-sensor
The built-in gravity sensor (G-sensor), if serious vehicle collision, the recorder will lock the first 5 seconds and 10 seconds after the image date when the accident occurred with the bottom left of the display screen displays a lock icon, locked image will be saved as a special file, the file

camera and choose front-inside view mode, it will automatically indicate full image of car reversing visual when you hang up "R" gear, but won't affect front-inside video record, also will automatically switch back front-inside view after cancel "R" gear.
As for system update to support 3 channels camera to video record at the same time, please prevail in kind and we're sorry for no further notice.

Reset key【RESET】
If the recorder crashes and accidental operation is not a normal fault, press 【RESET】 to shutdown the device, then press 【OK】 to reboot the device.

Installation Notes

1. Please test the rear view camera firstly, if it works well then install (package without rear view lens can be ignored).
2. Turn off the car engine.
3. The TF card insert the recorder slot.
【Note】Please use the high-speed TF card (Class10 above), capacity of not less than 4GB, TF card maximum support 32GB.
4. The recorder via a bracket fixed to the front windshield of the car.
5. Insert the car charger into the car cigarette lighter.
【Note】When wiring, extend the charging line along the edge of the car door frame and carpet under the car laying.
6. Install the rear camera at the rear of the vehicle, and pay attention to the up and down direction. Wiring can be buried along the edge of the car roof laying. 【Note】 There are two ways to install the rear camera:
A. Adorned on the glass above and behind the car, hands-on self-installation (Reversing visual function can not be achieved, only real-time recording rear view).
B. To find a professional installation staff installed in the license plate above the camera at the same time need to connect the power reversing lights (Reversing visual function can be achieved).
7. Adjust the lens position to ensure the best viewing angle.
8. Start the engine and check that the machine is operating properly.

Features

1. Use the automatic recording function
Start the car engine, the recorder automatically starts to open the recording function. Close the car engine. The recorder automatically saves the contents of the log and shuts down. recorded video segments are stored on the TF card. When the TF card is full, the recorder will overwrite the oldest recorded image preferentially.
【Note】
a. Time segment of record can be set 1/2/3 minutes in the menu.
b. The video individually saved in the folder named "DCIMA" and "DCIM8" in TF card (package include rear view lens).
3. Use motion detection
In standby mode, enter the menu screen open the motion detection mode. When the lens is sensitive to the peripheral area of a moving object, the state machine into the camera, recording 30 seconds after the system stops recording. To exit the motion detection mode, in standby mode to enter the menu screen close motion detection mode.
4. G-sensor
The built-in gravity sensor (G-sensor), if serious vehicle collision, the recorder will lock the first 5 seconds and 10 seconds after the image date when the accident occurred with the bottom left of the display screen displays a lock icon, locked image will be saved as a special file, the file

will not be overwritten cycle.
(note) Gravity sensor (G-Sensor)sensitivity adjustment support may actually need to change setting in the setup menu according to their image.

5. The device has a key lock feature that will need to retain an image without being locked loop overwritten. In the video mode, short press 【M】 key logger will then lock the entire video image.
6. In shooting mode, Press the 【M】 key to enter the menu setting, find the date/time menu, short press the 【OK】 button to confirm and return to the setup menu settings, press the 【M】 key to exit the menu setting. 【note】 In order to effectively record the date and time traffic safety accident forensics, before using the menu setting.
7. File playback
In the playback mode, press the 【OK】 key to play back. To exit playback mode, press MODE button again.
8. Reversing visual function
First, you must connect the dvr with car charger, rear-view camera connect the reversing lights. Insert the car charger, machine will automatically start recording status, screen switch R position in the recording mode automatically switches to the rear-view camera, display reverse image. After reversing visual machine automatically return to video mode.
Reminder: Please test the rearview camera is normal before installation.
9. Parking monitor(To achieve unattended surveillance video)
To achieve this function must be connected to the machine in the case of electricity, in the main menu to open the motion detection and parking monitoring function, in the standby state of the vehicle under vibration or moving objects in front, the recorder according to G-sensor to sense automatically start the machine and automatically locks the video for 30 seconds, and automatically save the video file, the video 30 seconds after 5 seconds without the operation will automatically shut down.
【note】 This function is only used when stopping. Please turn off the motion detection and stop monitoring function during normal driving.

FAQ

Machine appears "file error" message	Settings menu -> Restore factory settings and format the memory card, the general problem is TF card
The screen appears horizontal stripes interference	Please select the correct power supply frequency 50HZ(PAL)
How to properly turn on the 24-hour parking monitoring function	While in normal driving, please do not open it, it is easily lead to automatic shutdown or crash after parking is required to open, configure the back line or mobile power please