

一、产品结构

Q 产品说明



- | | | |
|-----------|------------|------------|
| 1) 录像/确认键 | 2) 电源键/关屏键 | 3) 向上键 |
| 4) 向下键 | 5) M菜单键 | 6) 麦克风 |
| 7) 指示灯 | 8) 喇叭 | 9) 挂扣 |
| 10) 前后镜头 | 11) 显示屏 | 12) USB 接口 |
| 13) 复位键/孔 | 14) TF 卡槽 | 15) 电池安装 |

二、按键及接口功能介绍

1. 录像/保存键/确认键

- 1) 短按开始录像，再短按停止录像+保存。

2. 电源键/关屏键

- 1) 长按可开机/关机
- 2) 短按开关键为关屏

3. 上键

- 1) 向上选择键
- 2) 短按放大焦距。
- 3) 长按/拍照

4. 下键

- 1) 向下选择键
- 2) 短按可缩小焦距。
- 3) 长按/第一次单独录像 A (内)
- 4) 长按/第二次单独录像 B (前)
- 5) 长按/第三次双录像前后

5. M/菜单键

- 1) 短按M键进入录音选项
- 2) 短按两次M键进入菜单四空模式选项/回放 设置 格式化 网络
- 3) 进入回放/前视频/按M键选择/后视频未加锁录像，加锁录像，图片文件，录音文件
- 4) 进入视频加锁 播放视频 长按M键选择加锁/可以在加锁录像中快速找到已加锁文件
- 5) 进入设置有十种模式选择/设置
- 6) 进入格式化可以把所有文件清除 格式化
- 7) 进入网络/打开APP/连接WiFi

6. 麦克风

可以在视频和音频 录制中清晰地记录声音

7. 指示灯

- 蓝灯亮/工作
- 蓝灯一闪一闪/录像或者录音
- 红灯亮/充电
- 红灯灭/充满

8. 喇叭

1510 大喇叭

9. 挂扣

可以挂在脖子上/录像录音

10. 前后镜头

- 1) 单独录像 前4K 内4K
- 2) 双录像2k+2k

11. 液晶显示

彩色液晶显示

12. USB 接口

该接口可用于连接USB线进行充电以及在PC上查看或传输文件。当相机连接电缆和电源时，相机会自动开机。

13. 复位键/孔

当机器出现黑屏死机等情况时 用针短戳一下可重新启动

14. TF 卡槽

设备最大支持128GTF卡，如果内存卡插入后提示 错误或者不能正常录制，请在菜单设置中格式化内存卡 建议首次插入的时候格式化内存卡。

建议用U3内存卡

15. 电池安装

18650L1 - 10N 2000毫安

三、基本操作说明

USB 模式

设备使用USB 数据与电脑连接，设备自动开机后屏幕显示存储/PC 摄像/视频模式 三个选项；

存储器：在此模式下可进行视频文件或者照片文件的存取与查看；

PC 摄像：在此模式下可用于电脑摄像头进行使用；


视频模式：仅用于电脑给设备供电。

四、产品参数与规格

IPS显示屏	彩色显示屏(240*240)
分辨率 固定	2K(2560*1440) 4K(3840*2160)
录像文件格式	MP4
照片格式	JPG
视频预览	开关
循环录像	关、1、3、5、10、15、30、分钟
时间设定	支持
按键音	开、关
音量控制	关、低、中、高

1.Product structure

Product description

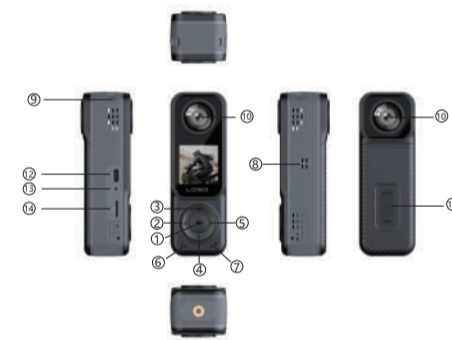

Note:The appearance picture is subject to the actual

- | | |
|---|--------------------|
| 1)Video/Save key | 9) back clips |
| 2)Power button/Confirm button | |
| 3)Up key | 10)Record/Save key |
| 4)Down key | 11)Menu key |
| 5)Lens rotation button | 12)Return key |
| 6)Take photos/night vision light on/off | 13)Reset hole |
| 7)The lens | 14)TF card slot |
| 8)Back magnet | 15)Display screen |
| | 16)USB interface |

2.Introduction of buttons and interface functions

1.Video/Save key

Push the button up to start recording,push it down to stop recording and save.

2.Power button

- 1)Long press to turn on/off.
- 2)Short press functions as confirmation key

3.Up Key

1)Navigates upward in menus

2)Short press in video/photo mode can increase focal length

4. Down Key.

2)Short press in video/photo mode can decrease focal length

5.Screen Rotation Toggle

1)Press the screen to rotate 180 degrees;

6.Photo/Night Vision Button

1)Short press: Captures a photo

2)Long press: Toggles the night vision light on/off

7. Lens Assembly

The lens is rotatable 180 degrees front and rear.

8. Mounting Magnet

The magnet attaches securely to ferrous surfaces.

3.Basic operating instruction

1.USB mode

The device uses USB data to connect to the computer.After the device starts up automatically,the screen displays three options of "memory /PC camera/video mode".

PC camera/video mode".

Memory.In this mode,video files or photos can be accessed and viewed.

PC camera.In this mode can be used for computer camera;

Video mode.Used only by the computer to power the device.

4. Product parameters and specifications

TF display	Color display (240*240)
Video resolution	2560*1440P, 1280*720P, 2K
Video file format	MP4
Picture quality	H, S, M
Photo format	JPG
Loop video	off, 1 minute, 3 minutes, 5 minutes
Recording function	Close and open
Time mark	Close and open
Key time	Close and open

15.USB Port

This port allows connecting a USB cable for charging and accessing/viewing files on a PC. The camera powers on automatically when connected to both cable and power source. Recording starts upon cable insertion if the Video Recording slider is in the Record position. This enables dashcam functionality.

language	English,Simplified Chinese,Traditional Chinese,Japanese,Korean,Russian,French,German,Czech,Portuguese,Polish,Italian,Turkish,Thai,Indonesian
Ac frequency	50Hz, 60Hz
Auto Screen off	off, 1 minute, 3 minutes
Format	off, 1 minute, 3 minutes
Working humidity	30%
Operating temperature	-65-20°C
Power supply	USB voltage 5V,current ≥1A
Standby current	USB standby current:≤5.4mA Battery standby current :≤39.1uA
Low current warning	3.48V
Power consumption	BAT3.7V/≤ 262mAh ≤0.97W USB5V/≤ 637mA /≤3.18W
Memory card	TF card,maximum support 128G

Note:Design and specifications are subject to change without prior notice.

Scan the QR code below to download and install the APP



WiFiLong press the button to turn on WiFi,then press to exit WiFi
SSID:the beginning of Actioncam
Password:88888888

*Wifi products do not need to download